



Assembly Instructions Sheet #SML1211

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Light Source: Medium Base 60W bulb Maximum.
Estimated Assembly Time: 20-30 minutes.
Preparation: Identify and inspect all parts before beginning installation. Check package contents and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.
 These instructions are provided for your safety. It's very important you read them completely before installing the fixture. We strongly recommend that a licensed professional electrician perform the installation.
 Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.
 Do not touch the bulb with bare hands use a cloth or glove.

Package Contents

A Fixture body
 x1

B Fixture body
 Assembly
 x1

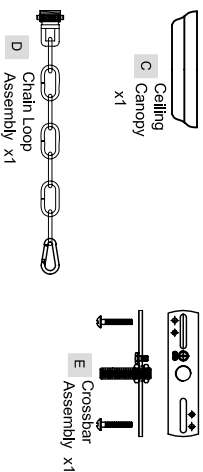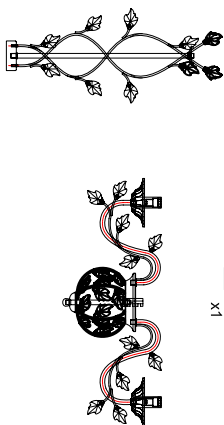

STEP 1 - Install Fixture body

A. Remove the Fixture body Assembly (A), lock onto Fixture body Assembly (B) tighten until snug.


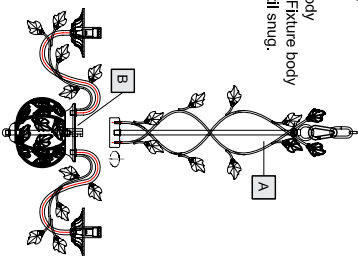


Figure 1

STEP 2 - Install Crossbar

 A. Attach the Crossbar (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.




STEP 3 - Install Canopy Chain Loop and Nipple

* Pliers is required for this step

A. Thread one Hex Nut (CC) to one end of the Nipple (DD) until it is at least 0.25" from the end. Pass one Lock Washer (BB) over the end of the Nipple (DD) and thread the Canopy Chain Loop (EE) onto the Nipple (DD). By using pliers, thread the Hex Nut (CC) against the Canopy Chain Loop (EE) and hand tighten until snug.

B. Thread another Hex Nut (CC) to the middle of the Nipple (DD). Place another Lock Washer (BB) over the Nipple (DD) and then thread the Nipple (DD) into the Crossbar (AA) until the Nipple (DD) is about 0.375" above the Crossbar (AA).

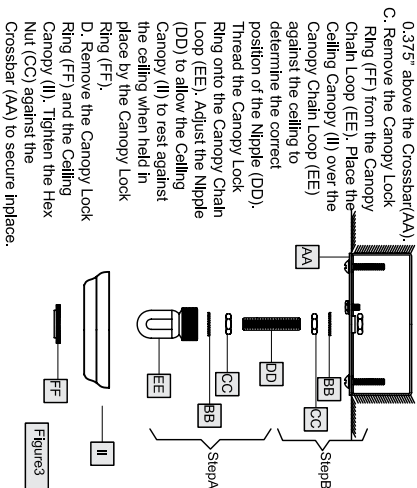

STEP 4 - Install Fixture Chain and Ceiling Canopy

A. Adjust the Fixture Chain (GG) to your desired length by removing links if needed.

B. With the Fixture Chain (GG) not attached to the Fixture Loop and the Canopy Chain Loop (EE), pull the supply wires through the Fixture Chain (GG) alternating links. After the wires are through the Fixture Chain (GG), pull the Supply Wires and the Ground Wire through the Canopy Lock Ring (FF) and the Ceiling Canopy (II) in order.

C. Attach one end of the Fixture Chain (GG) to the Fixture Loop with one Quick Link (HH). Lift the fixture and Fixture Chain (GG) up and attach the other end of the Fixture Chain (GG) onto the Canopy Chain

(Step 4 Continued)

* Pliers is required for this step
 Loop (EE) with another Quick Link (HH). The fixture will now hang safely. Close the chain loop at the Ceiling Canopy Loop (EE).
 D. Feed the Supply Wires and Ground Wire through the Canopy Chain Loop (EE) and Nipple (DD) into the Outlet Box. Cut the wires leaving approximately 8" of wire extending from the Outlet Box.
 E. Refer to Step 5 for wire connections.
 F. Raise the Ceiling Canopy (II) and Canopy Lock Ring (FF) up the Fixture Chain (GG) and over the Canopy Chain Loop (EE). Tighten the Canopy Lock Ring (FF) onto the Canopy Chain Loop (EE) until tight. Suggested chain length for Ceilingheight: 8' ceiling: use 5 links of chain and 2 quick links; 9' ceiling: use 14 links of chain and 2 quick links; 10' ceiling: use 23 links of chain and 2 quick links

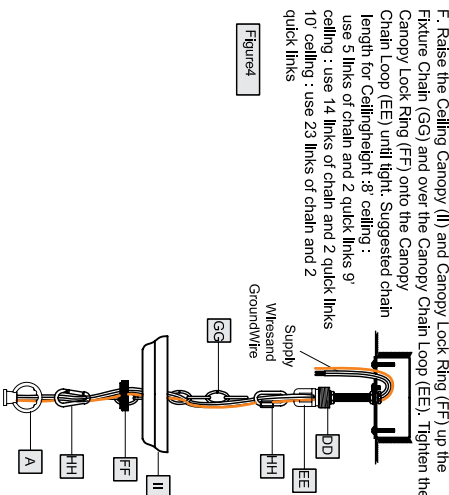


Figure 4

STEP 5 - Make Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.
 B. If the electrical wire is going to be cutshorter than provided, strip back the clear wire covering the 3 fixture wires as far as you need to. This will expose each fixture wire individually. Strip each end of 3 fixture wires

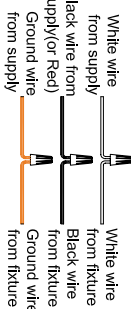


Figure 5

STEP 6 - Attach Bead Strings and Bulbs

A. This fixture uses E12 Clear Bulbs (B) Maximum 60 watts. Insert bulb and seat properly into place.


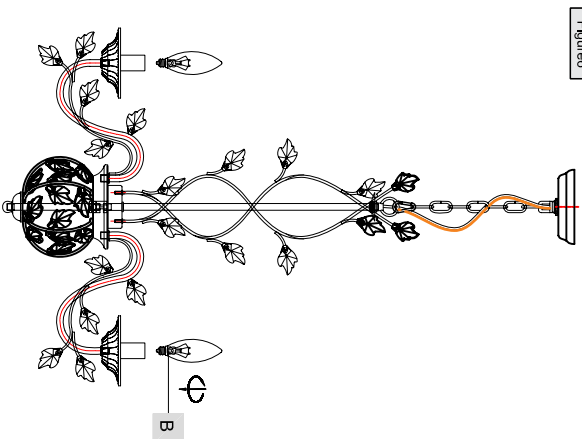


Figure 6

SML1211

FINISH: RUSTIC BLACK

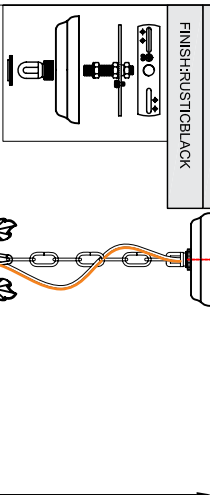

52.6"

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"