


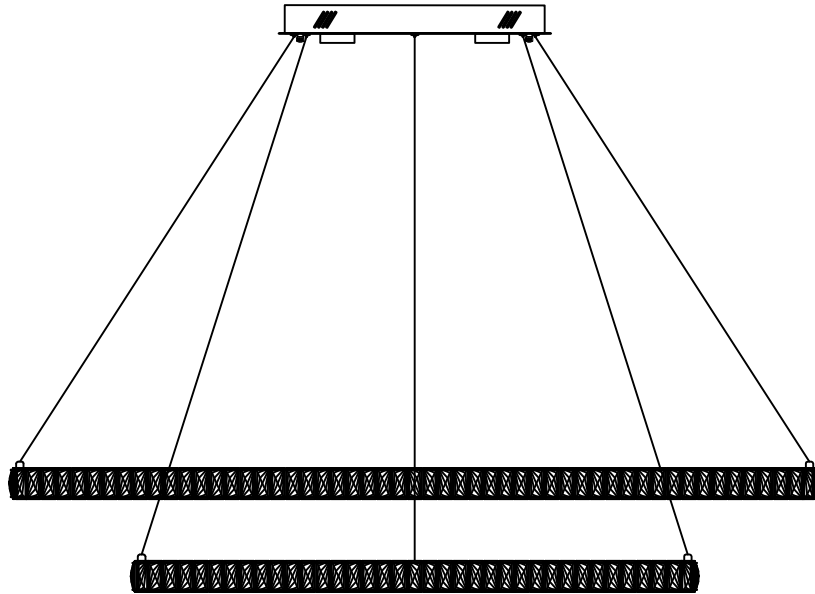

Item# SML227250-4000K

Chandelier

Fixture Dimension: L51.6"(131cm) x W18"(45.7cm) x H110" (280cm)

Wire: 9.2ft. (280 CM)

Fixture Color: Chrome

Fixture Weight: **35.2Lbs.** (**16Kg**)

Bulbs: Integrated LED – Kelvin: 4000K – Lumen: 6400 - Dimmable

Wattage: 80W

Voltage: 110-120V~ 50/60Hz

Approved Location: Dry Location

Compatible Dimmers:

Lutron Maestro 150-Watt Single-Pole/3-Way MultiLocation Digital CFL-LED Dimmer

Lutron Maestro 150-Watt Multi-Location Digital CFL-LED Dimmer Kit - White

Lutron RadioRA RA-600L Dimmer Switch Radio RA - Almond

Lutron RadioRA RALV-600L Single Pole Dimmer Switch Radio RA - Light Almond LA

Leviton 6343-Wi Decora Single Or 3 Way X10 Dimmer Switch X-10 2

Leviton MicroDim Remote 17775

Leviton DZS15-1LZ Decora Z-Wave Controls 15-Amp Scene Capable Switch, White

Leviton VP00R-1LZ, Vizia + Digital Matching Remote Dimmer/Fan Speed Control, New



Assembly Instructions for

Item# SML227250-4000K


ATTENTION:

CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER.
USE ONLY THE SPECIFIED BULBS AND DO NOT EXCEED THE MAXIMUM WATTAGE.

BEFORE YOU INSTALL:

1. Check the fixture frame for any physical damage
2. Check all parts and crystals to ensure they are not damaged or missing
3. Test all sockets with a bulb for conductivity before “dressing” the fixture
4. If there is any problem, please do not install the fixture, please contact the vendor and solve the problem first.


Outlet Box

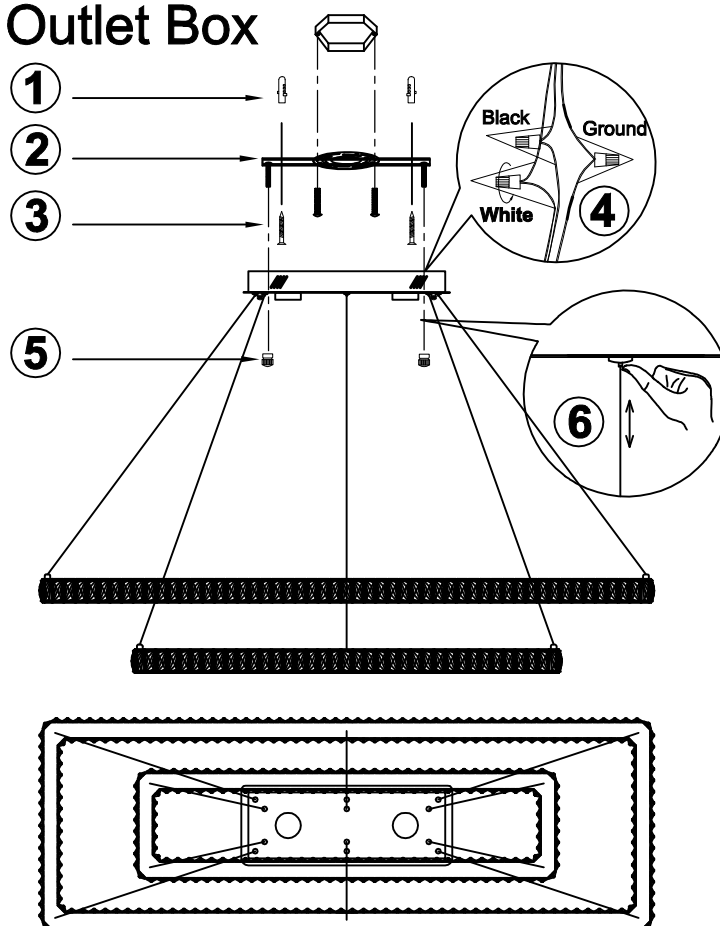

INSTALLATION STEPS:

1. For mounting into plaster - use the Rawl plugs (1) provided
2. Screw the cross bar (2) into the ceiling using the screws (3) as shown
3. Connect the junction box (4) to the cross bar, connect the wire correctly, L(black), N(white), E
4. Fix the junction box lid into place and lock bolt (5) to secure the fixture on the crossbar
5. Adjust the hanging height, push in the sleeve (6) then push up or push down the hanging wire to adjust

You have completed the installation for this fixture, enjoy it please.

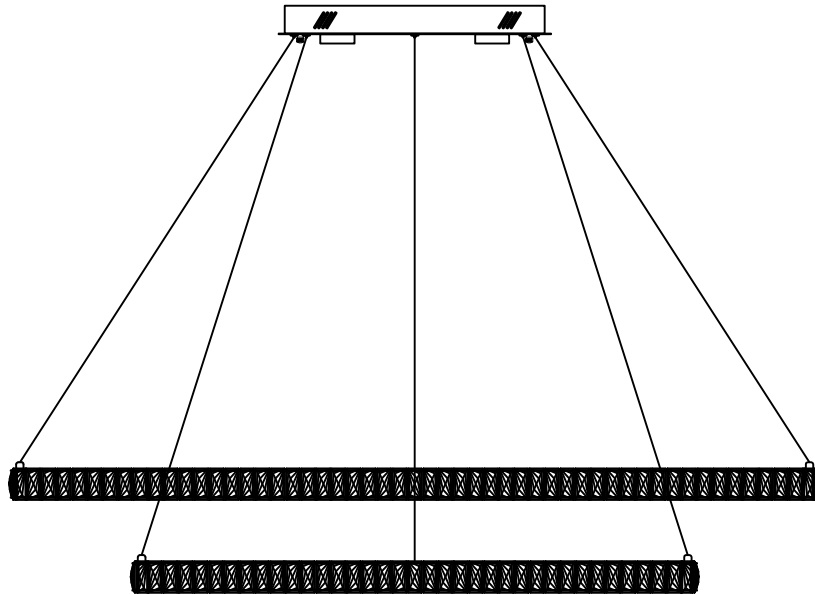

Article# SML227250-4000K

Lustre

Dimension du luminaire: L51.6"(131cm) x W18"(45.7cm) x H110" (280cm)

Fil: 9.2 pieds (280 CM)

Couleur du luminaire: Chrome

Poids du luminaire: 35.2 lb (16 kg)

Ampoules: LED intégrées - Kelvin: 4000K - Lumen: 6400 - Dimmable

Puissance: 80W

Tension: 110-120V ~ 50/60Hz

Emplacement approuvé: Emplacement sec

Gradateurs Compatibles:

Lutron Maestro 150-Watt unipolaire / 3 voies MultiLocation Digital CFL-LED Gradateur

Lutron Maestro Kit de gradateur numérique à DEL et CFL à emplacements multiples 150 watts - Blanc

Lutron RadioRA RA-600L Dimmer Switch Radio RA - Amande

Lutron RadioRA RALV-600L Variateur unipolaire Radio RA - Light Almond LA

Leviton 6343-Wi Decora variateur simple ou 3 voies X10 X-10 2

Télécommande Leviton MicroDim 17775

Leviton DZS15-1LZ Decora Z-Wave Controls Commutateur compatible scène 15 A, blanc

Leviton VP00R-1LZ, Vizia + Contrôle de la vitesse du variateur / ventilateur à distance numérique, nouveau



Instructions de montage pour

Article# SML227250-4000K

ATTENTION:


CONSULTER UN ÉLECTRICIEN QUALIFIÉ POUR VOUS ASSURER QUE LES CONDUCTEURS DE LA DÉRIVATION SONT ADÉQUATS. COUPEZ L'ALIMENTATION AU FUSIBLE OU AU DISJONCTEUR.

UTILISEZ UNIQUEMENT LES AMPOULES SPÉCIFIÉES ET NE DÉPASSEZ PAS LA PUISSANCE MAXIMALE.

AVANT D'INSTALLER:

1. Vérifiez le cadre de l'appareil pour tout dommage physique
2. Vérifiez toutes les pièces et tous les cristaux pour vous assurer qu'ils ne sont pas endommagés ou manquants
3. Testez toutes les douilles avec une ampoule pour la conductivité avant que l'appareil ne fonctionne
4. S'il y a un problème, veuillez ne pas installer l'appareil, veuillez contacter le vendeur et résoudre le problème en premier.

Boîte de sortie

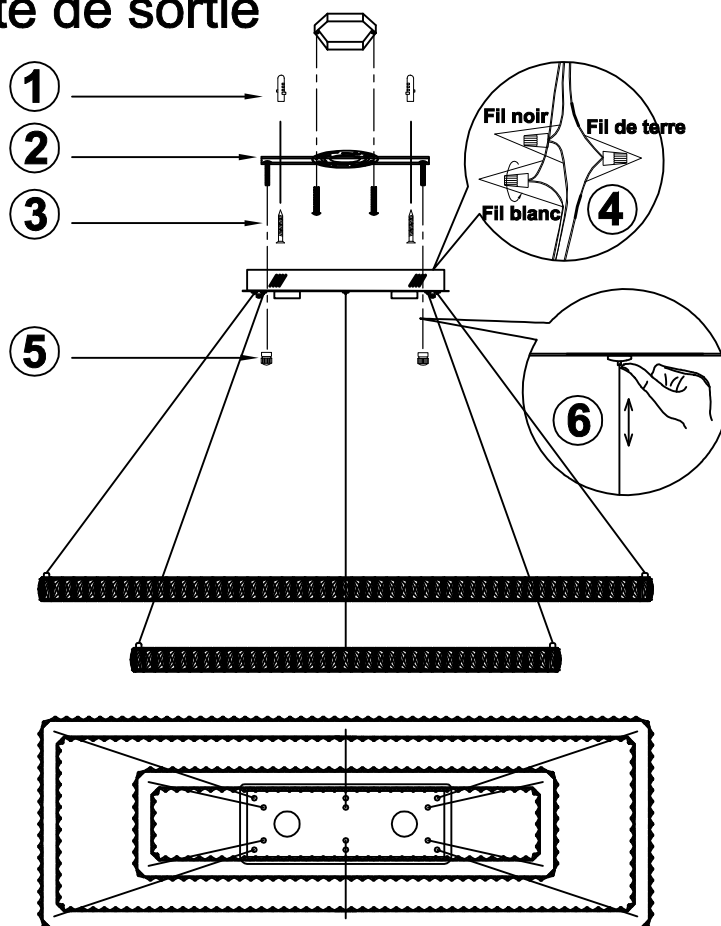

ÉTAPES D'INSTALLATION:

1. Pour le montage dans le plâtre - utilisez les bouchons Rawl (1) fournis
 2. Visser la traverse (2) dans le plafond à l'aide des vis (3) comme illustré
 3. Connectez la boîte de jonction (4) à la barre transversale, connectez le fil correctement, L (noir), N (blanc), E (fil de terre)
 4. Fixez le couvercle de la boîte de jonction en place et verrouillez le boulon (5) pour fixer le luminaire sur la barre transversale.
 5. Réglez la hauteur de suspension du câble, poussez le manchon (6) puis poussez vers le haut ou abaissez le câble de suspension pour régler
- Vous avez terminé l'installation de ce luminaire, profitez-en s'il vous plaît.